




CHANGING DISPLAY TO ENGLISH

Thank you for purchasing this German engineered high quality safe. The lock will be set to German as the default language. Please follow all the steps below to change the display to English.

To Open The Door

Always perform any alterations to settings with the safe door unlocked and open

1. Remove the clear plastic tab from the battery compartment to activate the battery
2. Press the **"ON/ENTER"** button to turn on the display
3. Enter the default pass code of **"123456"**
4. Press **"ON/ENTER"** to confirm the code
5. Twist the dial clockwise until the lock is in the open position
6. Open the door

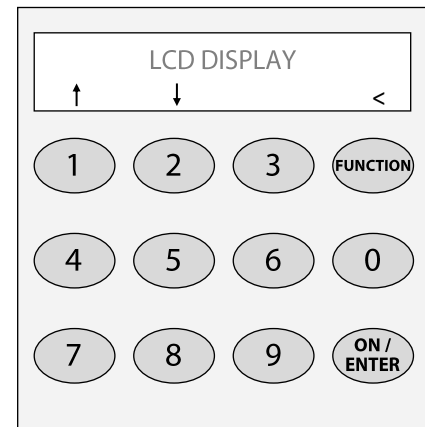

To Change The Language

With the safe door open please perform the following steps:

1. Press **"ON/ENTER"** button to turn on the display
2. Press the **"FUNCTION"** button
3. The LCD menu displays arrows above buttons **"1"** and **"2"** which are used to scroll through the menu. Press the **"2"** button to move down the menu
4. When **"Sprache / Language"** is displayed, press **"ON/ENTER"** button to select
5. Scroll down to your language choice using button **"2"** (English)
6. Press **"ON/ENTER"** to select
7. Press **"FUNCTION"** to exit the menu system

The language is now set. This procedure only needs to be performed once.

These instructions apply to safes fitted with the SecuTronic locking system:



SecuTronic combination lock
Karat E Models



SecuTronic combination lock
with finger scan
Diplomat E Models
Karat E FS Models



SecuTronic combination lock
with finger scan
Ranger E FS Models
Royal E / ES / EE Models
OfficeLine & OfficeDoku E Models

QUICK START GUIDE

ENGLISH

SecuTronic English Language Instructions 28/05/15

SecuTronic English Language Instructions 28/05/15

QUICK START GUIDE

ENGLISH